


# 2 Humbuckers, 2 Volumes, 2 Tones, 3 Way Switch, 2 Series/Parallel

## Push/pull Settings

UP: pickup is in parallel  
DOWN: pickup is in series

Parallel is a single-coil sound.  
Series is standard humbucker sound.  
(both series & parallel are hum-canceling).

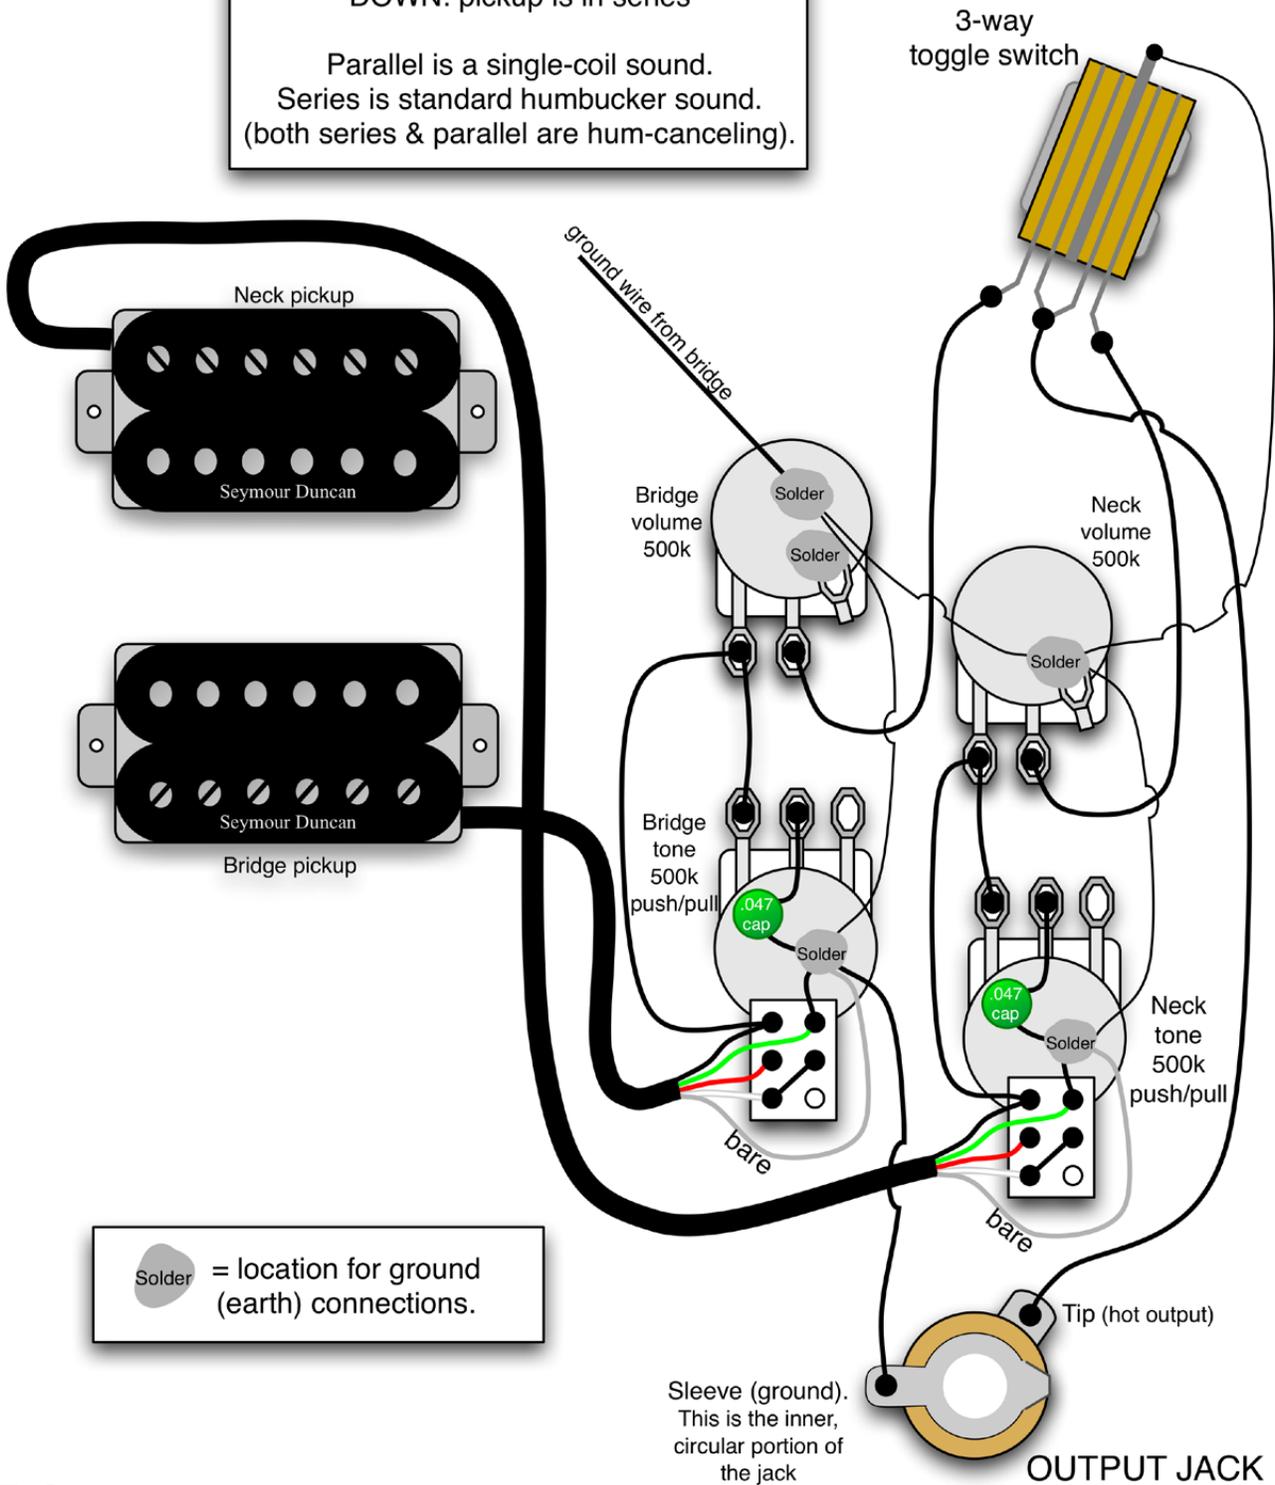

Solder = location for ground (earth) connections.

Sleeve (ground).  
This is the inner, circular portion of the jack

OUTPUT JACK



**Seymour  
Duncan**

5427 Hollister Ave. • Santa Barbara, CA. 93111  
Phone: 805.964.9610 • Fax: 805.964.9749 • Email: [wiring@seymourduncan.com](mailto:wiring@seymourduncan.com)